


INSTRUCTION OF CONNECTING AND CHANGING CONNECTION VERSALITY INTERNAL HYDRANT 52

1. Type of valve connecting in hydrants:

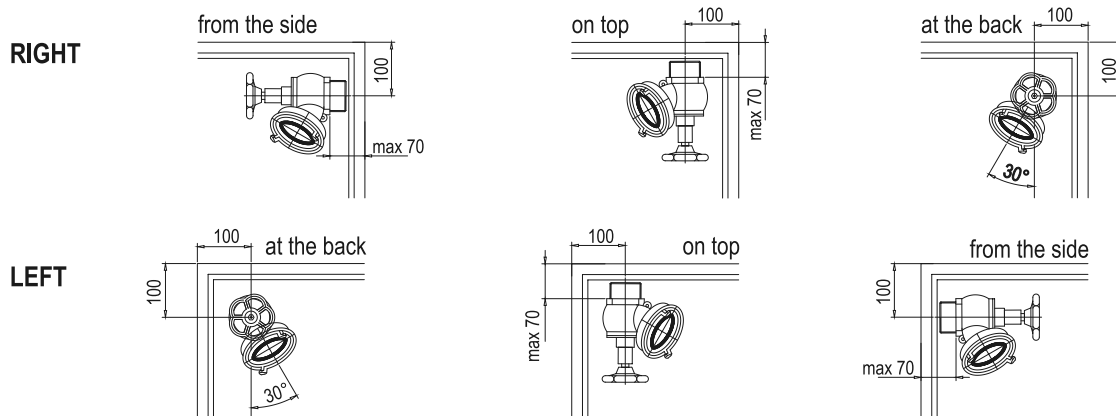


(NOTICE: distance from hydrant valve ZH 52 to hydrant cabinet's wall should be max. 70mm)

2. Operation need for changing connection to water pipe:


In case you need to change side of connection to water pipe please do it before installation on wall or in recess

EXAMPLES


Hydrants with hose reel - changing from right to left side connection

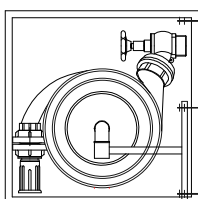


Rys.1
Connection at right side

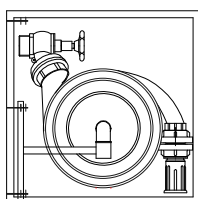

Rys.2
Connection at left side

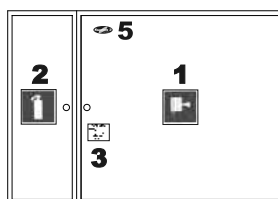


Rys.3
Correct hydrant's marking inside cabinet

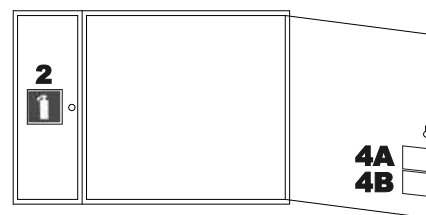


Rys.4
Hydrant's marking inside door


Hydrants with hose bracket - changing from left to right side connection

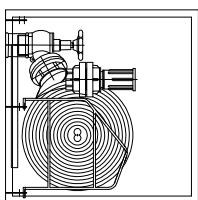


Rys.1
Connection at left side

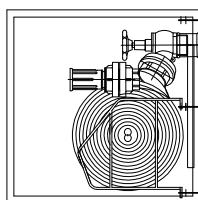

Rys.2
Connection at right side

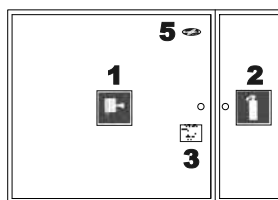

Rys.3
Correct hydrant's marking inside cabinet

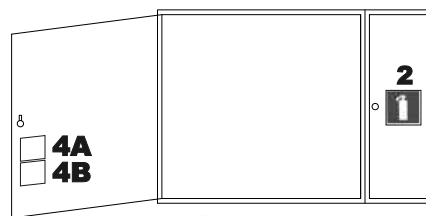

Rys.4
Hydrant's marking inside door

You can change connection side (without changing hydraulic properties) taking following operations:

- Take out hose reel or bracket, disassemble rotary arm (refer to hydrant's with hose reel)
- turn round 180° the cabinet (it's ready for connection)
- install cabinet (on wall or in recess),
- install hydrant valve ZH 52 to water pipe
- assemble rotary arm or hose bracket, put hose in basket
- rewind hose on the hose reel in the opposite direction
- assemble hose reel into rotary arm,
- put stickers/sign in accordance to below instruction:
stickers nr 1 – „Hydrant sign”
stickers nr 2 – „Extinguisher sign”
stickers nr 3 – service manual
stickers nr 4A and 4B – information about hydrant's type (pic.4 - inside door)
stickers nr 5 – producer's Logo

Further actions according to Connecting instruction.