


## INSTRUCTION OF CONNECTING AND CHANGING CONNECTION VERSALITY INTERNAL HYDRANT 25

### 1. Type of valve connecting in hydrants:

Depending on type of hose connecting hydrant valve with hose reel water axis, hydrant valve could be used with coupling or without. Connecting hose length is always 0,88m independently of connecting type.

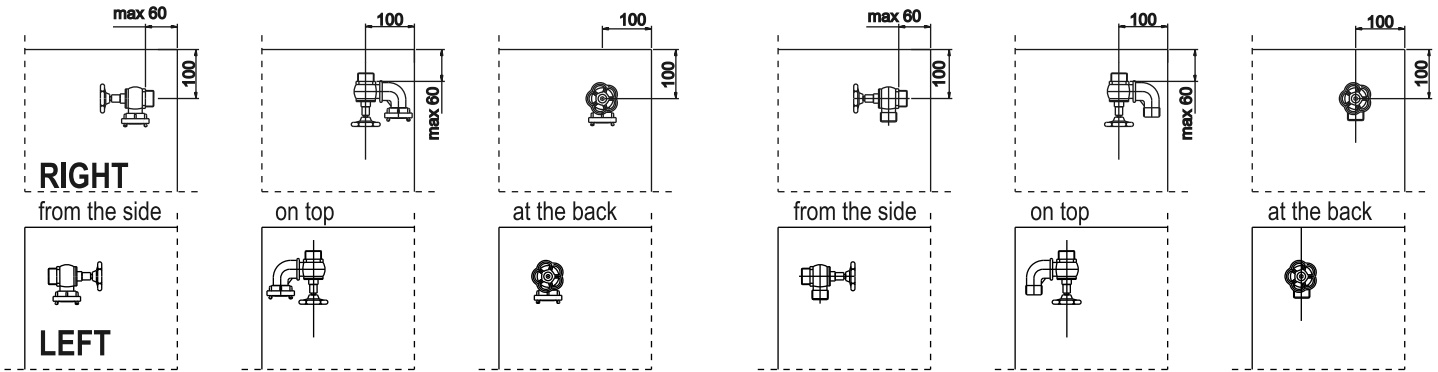


(NOTICE: distance from hydrant valve ZH25 to hydrant cabinet's wall should be min. 20mm)  
Connecting hydrant valve on top is needed using elbow 1".


### 2. Operation need for changing connection to water pipe:

In case you need to change side of connection to water pipe please do it before installation on wall or in recess.:


#### Hydrants with hose reel - changing from right to left side connection

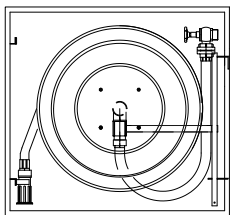


Rys.1  
Connection at right side

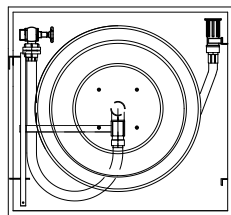

Rys.2  
Connection at left side

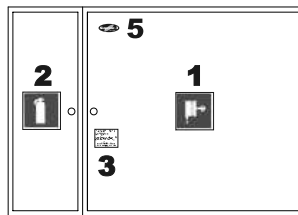


Rys.3  
Correct hydrant's marking inside cabinet

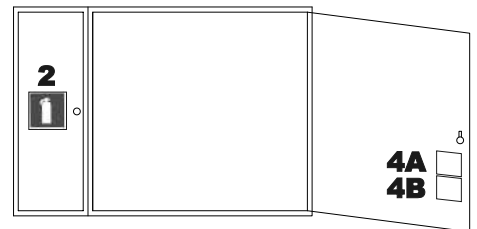


Rys.4  
Hydrant's marking inside door


#### Hydrants with hose reel - changing from left to right side connection.

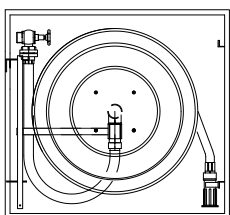


Rys.1  
Connection at left side

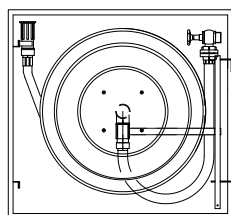

Rys.2  
Connection at right side

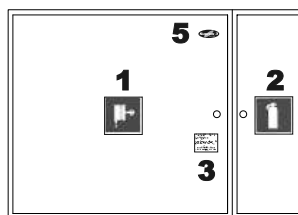

Rys.3  
Correct hydrant's marking inside cabinet

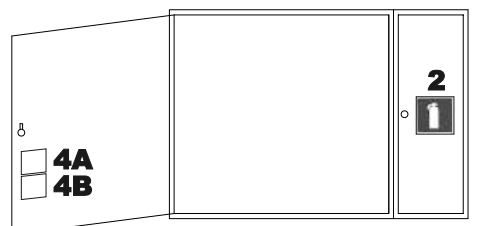

Rys.4  
Hydrant's marking inside door

You can change connection side (without changing hydraulic properties) taking following operations:

- take out hose reel
- turn round 180° the cabinet (it's ready for connection)
- install cabinet (on wall or in recess)
- install hydrant valve ZH 52 to water pipe
- put stickers/sign in accordance to below instruction
  - stickers nr 1 – „Hydrant sign”
  - stickers nr 2 – „Extinguisher sign”
  - stickers nr 3 – service manual
  - stickers nr 4A and 4B – information about hydrant's type (pic.4 -inside door)
  - stickers nr 5 – producer's Logo

Further actions according to Connecting instruction.