

INSTRUCTIONS FOR INTERNAL HYDRANTS



ENG

SPECIFICATION OF HYDRANTS

The hydrant is delivered in one package, which includes:

- hydrant cabinet mounted in recess (W) or mounted on the wall (Z)
- 25 mm inlet shut-off valve:
 - manual brass DN25 rising stem valve with pressure gauge, or
 - manual brass DN25 rising stem valve, or
 - manual aluminum DN25 ball valve ZK-1
- fire hose reel with semi-rigid hose $\phi 19$ (30 mb or 20 mb) and hydrant nozzle type PWh 19 D6 (fixed connection to fire hose)
- connector (19" connecting hose with 1" connectors)
- folding collar for a recessed hydrant cabinet (W)

LIST OF SPARE PARTS

- hydrant cabinet body, cabinet door or a complete hydrant cabinet
- retractable arm
- fire hose reel (complete with semi-rigid hose and nozzle 19 D6)
- connector (19" connecting hose with 1" connectors)
- folding collar for a recessed hydrant cabinet (W)
- lock
- 25 mm inlet shut-off valve
- supports, bases

COMMENTS

- During the installation the front of the cabinet should be protected against building materials and mechanical damage (dirt, paintings, etc.), or installed after finishing the works.
- If it is not possible to install the cabinet on a wall or in a recess (e.g. a drywall or the need to install a hydrant in the middle of a large warehouse), use supports or bases, which will be delivered with the cabinet by the manufacturer at the customer's additional order.
- Use flat wrenches when assembling all fasteners with flats or mounting hexagons.
Apply lubricant to the threads of the aluminum fasteners before assembly.
- Checking the tightness of connections, service inspection (including the pre-delivery inspection) can only take place, when the hydrant installation is free of any contamination!

STORAGE INSTRUCTIONS FOR INTERNAL HYDRANTS AND METAL PRODUCTS

1. Internal hydrants and metal products should be stored in warehouses or in roofed and ventilated spaces that provide protection against weather and environmental factors.
2. Storage conditions: ■ temperature from $+5^{\circ}\text{C}$ to $+25^{\circ}\text{C}$ ■ humidity from 40% to 60% ■ no longer than 1 year without use
3. The packaging should not be allowed to get wet or damp. In this case, the packaging should be replaced immediately, drying the product first.
4. Do not allow contact with aggressive substances, in particular solvents which contain esters, ketones, alcohols, aromatic compounds, glycol ethers and halogen hydrocarbons, and with acidic, alkaline and abrasive properties. **NOTE:** In case of contact with the abovementioned substances, you can attempt to repair them in accordance with the maintenance and cleaning instructions for powder coated and stainless steel cabinets available at www.supron.pl
5. Products should be stored on pallets or other flat surface. It is recommended that the minimum distance of the package from the floor is 10 cm.
6. Store, move, transfer, etc. in accordance with the direction indicated on the packaging, if it is not available - door upwards with special care not to cause damage.
7. Stack products of only one dimension up to max. 2.2 m high, with special care not to cause damage.

ASSEMBLY OF THE INTERNAL HYDRANT 19


- Install the hydrant cabinet on the wall (Method of assembly - Fig. 1) using $\varnothing 10$ wall plugs or in the recess (Method of assembly - Fig. 2) using wall plugs and polyurethane foam.
- Install 25 mm inlet shut-off valve
- Check the tightness of the valve connection to the water system after installing the valve. (NOTE! Installation must be clean)
- Install a fire hose reel with a semi-rigid hose
- Connect hydrant valve with fire hose reel (water axis) adopting the principle of combining "brass-aluminum" or "brass-brass"
- Set the hydrant nozzle to STOP position (closed)

USE OF SUPPORTS AND BASES

The height of supports and bases is selected so that the hydrant valve is mounted at 1350 mm from the floor.

Supports and bases for internal hydrants 19

Hydrant type	Height of support or base	No of supports or base	Base type
PN-EN 671-1(Z/W-19)	700 mm	2 pc.	S-C-PODSTAWA-700×160 S-C-PODPORA-700X145

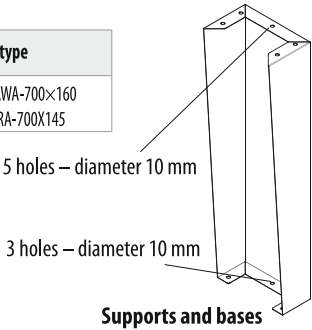

METHOD OF ASSEMBLY THE INTERNAL HYDRANT 19

Fig. 1 Internal hydrant mounted on the wall


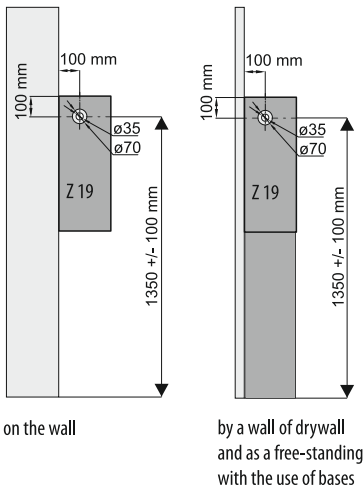



Fig. 2 Internal hydrant mounted in recess

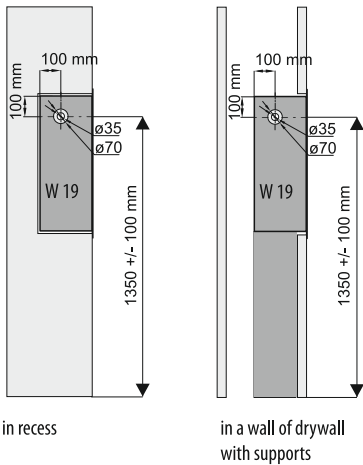

INSTRUCTION OF CONNECTING AND CHANGING CONNECTION OF INTERNAL HYDRANT 19

CONNECTING VERSION NO 1 (25 MM INLET SHUT-OFF VALVE)

Used hydrant valve can be with or without adapter – it depends from connector for hydrant valve and water axis. Length of the connector is always ~1m, regardless of the connection method.

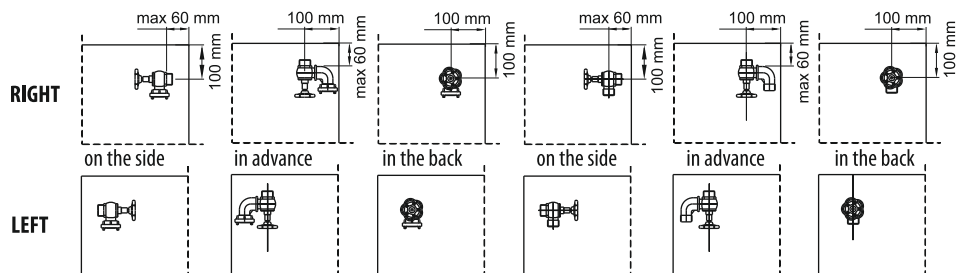


NOTE! The distance of 25 mm inlet shut-off valve the wall of the cabinet should be at least 35 mm.

Assembly of hydrant valve from above require screw the 1" nipple elbow to the valve.


OPERATIONS NEEDED FOR CHANGING CONNECTION TO WATER PIPE

SUPRON 3 manufactures internal hydrant with left door (hinge on left side) and left water pipe connection or according to customer's wish. Installer can change left connection and left door to right connection and right door (before assembling cabinet). Hydrant cabinet has universal connection thanks to blanked connecting holes – placed at side, back and top of cabinet. Stickers for marking internal hydrant and documentation are placed in zip-plastic bag inside cabinet (on door).


INTERNAL HYDRANT 25 - CHANGING FROM LEFT TO RIGHT SIDE CONNECTION

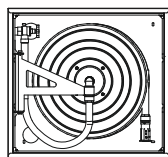


Connection at left side

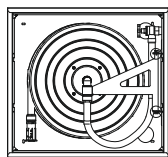

Connection at right side

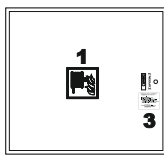


Correct hydrant's marking

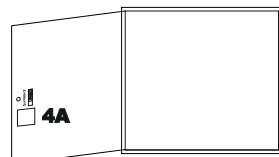


Hydrant's marking inside of the door


INTERNAL HYDRANT 25 - CHANGING FROM RIGHT TO LEFT SIDE CONNECTION

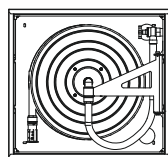


Connection at right side

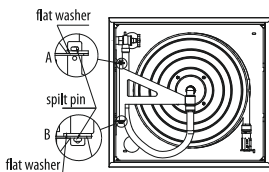

Connection at left side

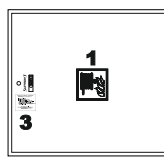

Correct hydrant's marking

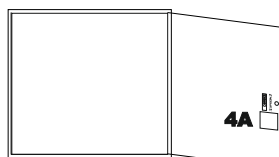


Hydrant's marking inside of the door

INSTRUCTION OF CONNECTING AND CHANGING CONNECTION OF INTERNAL HYDRANT 19

OPERATIONS NEEDED FOR CHANGING CONNECTION SIDE

You can change connection side (without changing hydraulic properties) taking following operations:

- Take out the hose reel in carton from cabinet
- Take out the hose reel arm
- Rotate the cabinet by 180°
- Install the hydrant cabinet on the wall or in the recess
- Fix the position of the arm in a mirror image to the original by moving sleeves and cotters
- Assemble the hydrant valve to the supply pipe as described above
- Assemble the hose reel in the arm
- In case of the cabinet with Patent lock change to position of the key – according to the further manual
- Put the stickers on the hydrant cabinet:

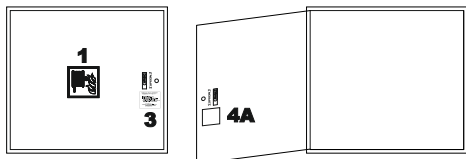

Sticker no. 1 - "Hydrant sign"

Sticker No. 3 – Hydrant manual

Sticker no. 4A – Information about hydrant's type
(inside of the door)

NOTE! The hydrant's markings presented in the instructions are in accordance with EN 671-1: 2012.

Failure to follow the manufacturer's instructions may results in loss of warranty.

INSTRUCTIONS FOR ASSEMBLING THE FOUR-ELEMENT FRAME IN THE HYDRANT CABINETS

The steps to install the frames are as follow:

1. Insert one vertical frame profile (2) between the door (4) and the cabinet body (5) from the door hinge side.
2. Open the door (4) as widely as possible and lean back the hinge (6).
3. Attach the profile to the cabinet body (5) using two metal sheet screws (3)
4. Put the second vertical frame profile (2) to the cabinet body (5).
5. Attach the second vertical frame profile (2) to the body (5) using two metal sheet screws (3)
6. Attach the horizontal frame profiles (1) in the same way as above.

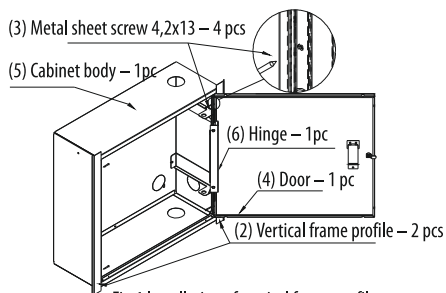


Fig.1 Installation of vertical frame profiles

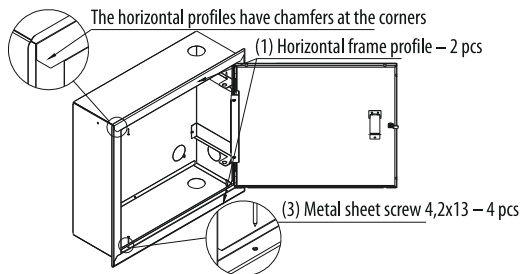


Fig.2 Installation of horizontal frame profiles

If additional construction works are required around the recess, please remove the frames to avoid damaging of the coating.

POSITION OF THE HOSE REEL HOLDER IN HYDRANTS 19

CHANGING OF HOSE REEL ARM POSITION FROM LEFT TO RIGHT SIDE CONNECTION

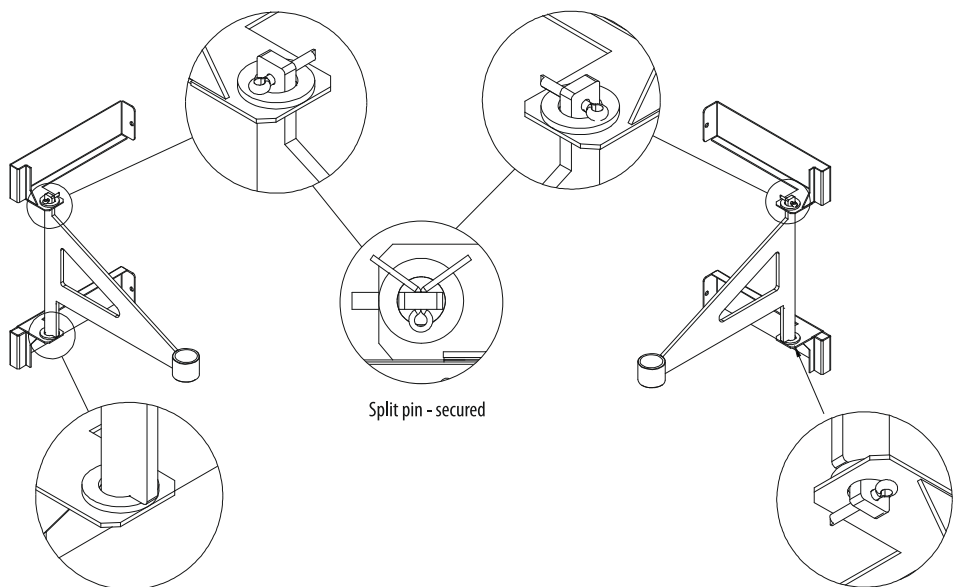


Fig.1 Position for connection on the left side

Fig.3 Position for connection on the right side

CHANGING OF HOSE REEL ARM POSITION FROM RIGHT TO LEFT SIDE CONNECTION

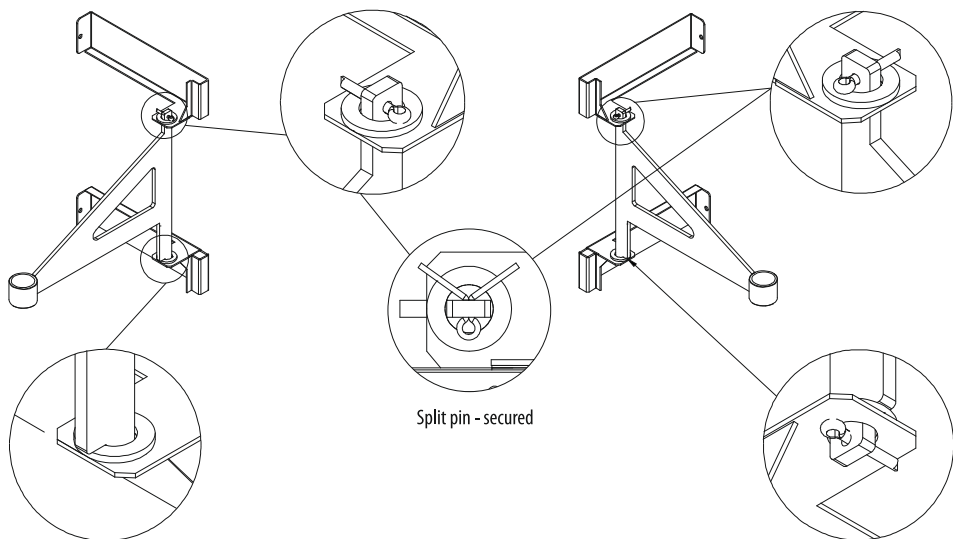



Fig.1 Position for connection on the right side

Fig.3 Position for connection on the left side


INSTRUCTION OF ASSEMBLY FOR THE GLASS IN THE WINDOW WITH KEY

PATENT LOCK

The cabinets with patent lock have a safety glass with a key for emergency opening.
The key is hung only in one variant in a way that makes it easier to swing out.

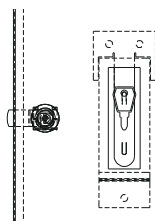

Upper position

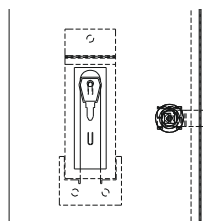

Lower position

If you need to change the side of hydrant connection, the direction of opening cabinet door, replace the broken glass or after finding the wrong key suspension (on the lower catch):

- Open the door
- Pull out the plastic glass lock
- Pull out the glass; scraps of glass after breaking
- Remove the key from the lower catch (applies to incorrect suspension)
- Hang the key on the upper catch and bend the catch
- Bend spring plate in the direction - outside the cabinet, giving it elastic properties - Fig. 1
- Slowly bend metal plate in the direction inside of cabinet through the window
- Slide the glass into the guide so that the key is behind it - Fig. 2
- Slide the lock into the guide (the insertion force should be significant to prevent the glass falling out) - Fig. 3

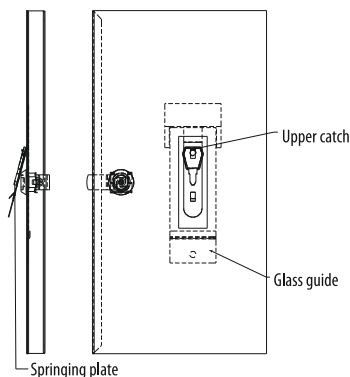


Fig. 1

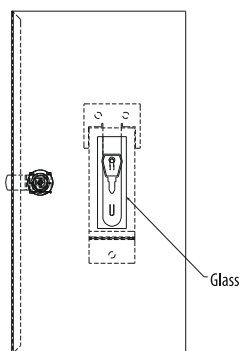


Fig. 2

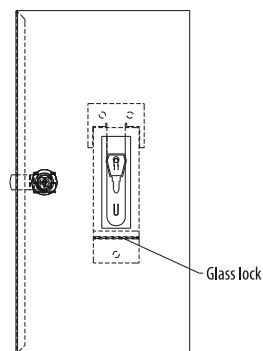


Fig. 3

GENERAL RECOMMENDATIONS

The manufacturer recommends technical inspections and maintenance at least once a year and after each use of a fire hydrant.

Inspections and maintenance should comply with the current PN-EN 671-3 standard:

1. The regular periodic inspection should be carried out by a responsible person, at intervals depending on the environmental conditions, to make sure that each hydrant:

- is located in the designed place
- it isn't covered, is visible and has legible markings and instructions
- no visible damage

The responsible person should immediately take action to remove any irregularities noted.

2. Inspections and maintenance carried out once a year must be carried out by a authorized person as follows:

Unwind fire hydrant hose completely, pressurize hydrant and check that:

- device is not blocked, undamaged, and components are not corroded or leaking
- instructions are clean and legible
- location is clearly marked
- wall mounts are suitable for their purpose and securely mounted
- water outflow is even and sufficient (it is advisable to use a flow meter and pressure gauge)
- pressure gauge (if used) works correctly and within its measuring range
- the entire length of fire hose shows no signs of damage, deformation, worn or cracks. If fire hose is damaged, it should be replaced with a new one or pressure tested to the maximum working pressure.
- hose clamps or taping are of the correct type and properly clamped
- fire hose reel rotates slightly in both directions
- in the case of a swing-out fire hose reel, whether it rotates easily and tilts 180 °
- in the case of manual fire hose reel the shut-off valve is of the correct type and works easily and correctly
- in the case of automatic fire hose reels, that the operation of automatic valve is correct and the operation of additional one the service shut-off valve is correct
- the condition of water supply pipes is good. Particular attention should be paid to whether flexible sections show signs of worn or damage
- if the fire hydrant is equipped with a cabinet, is there no signs of damage and whether cabinet door opens easily
- the nozzle is the right type and easy to use
- hose guides work correctly. Make sure that they are properly and securely attached
- leave the internal hydrant ready for immediate use. If major repairs are required, fire hydrant should be marked 'DAMAGED' and a authorized person should notify the user / owner.

Periodic inspection and maintenance of hoses:

- every 5 years hoses should be pressure tested for the maximum operating pressure of the installation, in accordance with the standards PN-EN 671-1, PN-EN 671-2.

GENERAL RECOMMENDATIONS

Documenting inspections and maintenance:

After the review and the necessary measurements, the internal hydrants should be marked "CHECKED" by authorized persons. Responsible persons should keep permanent records of all inspections, controls and tests. Such a record should contain:

- date (month and year) of the review and test
- list and date of spare parts installed
- additional tests to be performed, if required
- date (month and year) of the next review and tests
- a list of all internal hydrants

Maintenance and inspection labels:

Maintenance and inspection data should be written on a label that must not cover any manufacturer's markings. The following information should be appear on the label:

- the word "CHECKED"
- name and address of the hydrant supplier
- a sign uniquely identifying the person performing the inspection or the surname and first name of the maintainer
- date (month and year) when the maintenance was carried out